

Straight



Each set consists of one aluminium hook and one plastic clip.



1. Place two frames next to each other.



2. Hold the aluminum hook above the two hinges.



3. Slide the aluminum hook down into the slot.



4. Attach the plastic clip to the diagonal bars of the two frames, until you hear it click.



5. Continue until all parts on the both the front and backside are linked.



Scan for instructional video

90 Degrees



Each set consists of two aluminium connectors. One for the top and one for the bottom side.



1. Place two frames next to each other in an 90 degree angle.



2. Lift one frame and slide the connector in the slot of the outer hinge.




3. Lift the other frame and place it on top, so the hook slides in the slot.



4. Slide the second connector in the slots of the hinges on top.



5. The two frames are now properly linked.

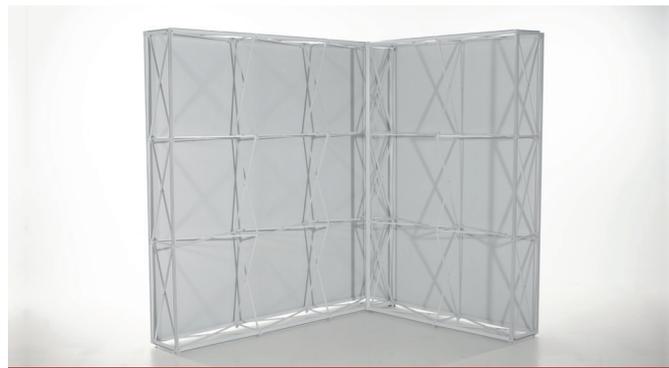

Scan for instructional video

Arch



Each set consists of two aluminium connectors, and the aluminium clips to close them with.



Before you start; make sure to remove the feet from the frame that will create the arch.



You can easily unscrew them and pull them out.



1. Locate the left and the right connector, as shown in the picture.



2. Slide the connector in the slot of the outer hinge.



3. Hook the pin of the aluminium clip in the opening of the connector.



4. Close the clip with the screw for a secure connection.



5. Continue with the other connectors, until you've placed them on all four corners of the frame.



6. Lift the frame horizontally and place it in position.



7. Slide the aluminium connectors over the bars and into the slots in the hinges of the supporting frame.



8. Use the aluminium clips with the screws to close the connectors.



Scan for instructional video